


# STAR 6 C STAR 6 JP C

## FAMILIARIZATION GUIDE




### MACHINE USE FROM THE GROUND CONTROL BOX

- 1 Check that the E-Stop buttons from the ground and platform control boxes are not pressed, otherwise pull them out.

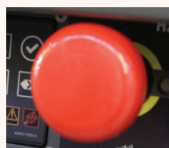


- 2 Ground control box: turn the key to the ground control position.

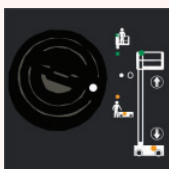

- 3 Mast extension/retraction: Press and hold the "Enable switch" and the command buttons simultaneously to make the desired movement.




- 4 Power OFF: From the ground control box, turn the key to the 0 position.

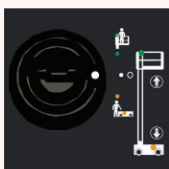

### EMERGENCY STOP



Push the Emergency Stop button to immediately stop all movements of the machine.

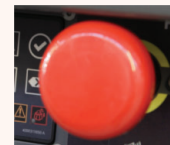

### RESCUE AN OPERATOR

Use the ground controls 1 2 3 to lower the platform to the ground.

If the ground controls are not functional, press and hold the push button (1) in front of the machine, to lower the platform.

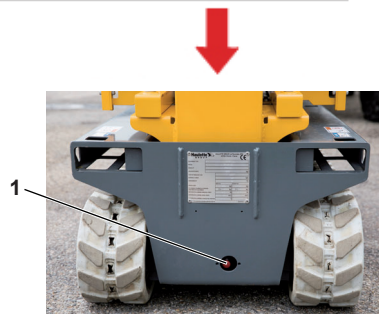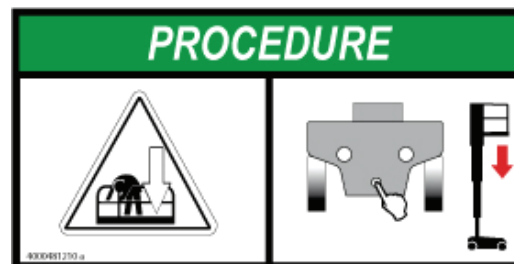

### HAULOTTE ACTIV'SCREEN



Mast extension



Mast retraction



Enable Switch



Navigate up



Navigate down



Cancel a selection



Validate a selection in the menu



Machine fault indicator



Overload indicator

# STAR 6 C STAR 6 JP C

## FAMILIARIZATION GUIDE




### MACHINE USE FROM THE PLATFORM CONTROL BOX

- 1 Check that the E-Stop buttons from the ground and platform control boxes are not pressed, otherwise pull them out.



- 2 Ground control box: Turn the key to the platform control position.

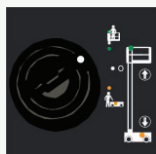

- 3 Steering/Driving, Mast: Push the selector (1) to the right to activate steering/driving or to the left to operate mast extension/retraction.




- 4 For steering, press the thumb button (2) in the desired direction.  
For driving, depress the enable switch (3) and move the joystick in the desired direction.



- 5 Mast extension/retraction: Press and hold the enable switch (3) and simultaneously push the joystick in the desired direction.

- 6 Power OFF: From the ground control box, turn the key to the 0 position.


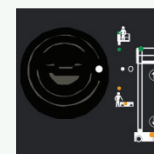


### EMERGENCY STOP

Push the Emergency Stop button to immediately stop all movements of the machine



### EXTENSION DECK

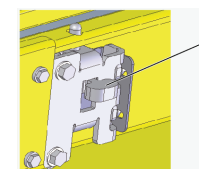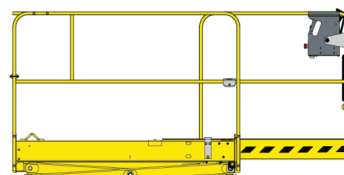

The platform is equipped with an extension deck.


Make sure that the extension deck is in locked position.

Press the pedal (1) to release the extension deck lock pin.

### INFORMATION - INDICATORS



 Horn



Battery charge indicator:



Batteries charged



Flashing: 40% charge remaining



Constantly lit: 20% charge remaining  
Recharge the batteries



Machine fault indicator



Platform overload indicator



Tilt indicator